

FieldServer ENOTE

ProtoNode, ProtoCarrier, ProtoCessor or QuickServer Recovery Instructions

APPLICABILITY & EFFECTIVITY

Effective for all systems manufactured after October 2021.



Document Revision: 1.C

T18020



fieldserver

MSA Safety
1000 Cranberry Woods Drive
Cranberry Township, PA 16066 USA
Website: www.MSAsafety.com

U.S. Support Information:
+1 408 964-4443
+1 800 727-4377
Email: smc-support@msasafety.com



EMEA Support Information:
+31 33 808 0590
Email: smc-support.emea@msasafety.com

1 When to Perform a Recovery

Perform the following recovery if unable to connect to a FieldServer.


The following recovery instructions only apply to FieldServer ProtoNodes, ProtoCarriers, ProtoCessors or QuickServers of model type 2.

If the FieldServer was received before June 2018, the FieldServer is model type 1. However, model type 1 FieldServers continued to be shipped after this date so a visual check of the ProtoCessor board is needed to confirm the model type of a FieldServer. Check the images below for confirmation of the FieldServer model type.

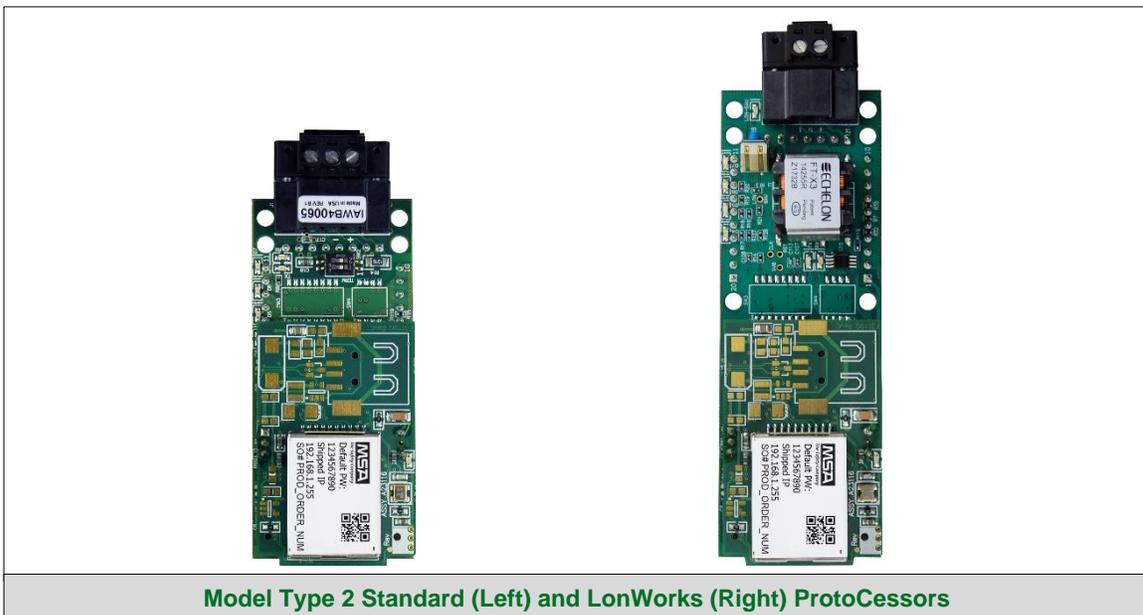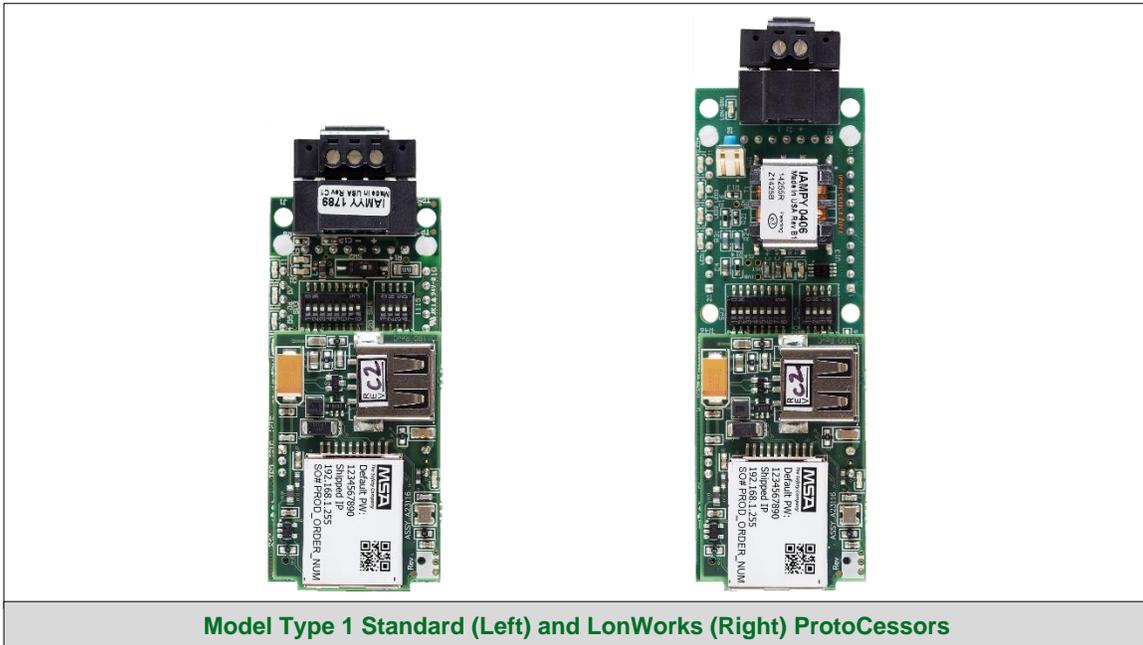


2 Recovery Instructions

- Put a jumper on the first and second pins shown on the left side of the Ethernet port – shown below:

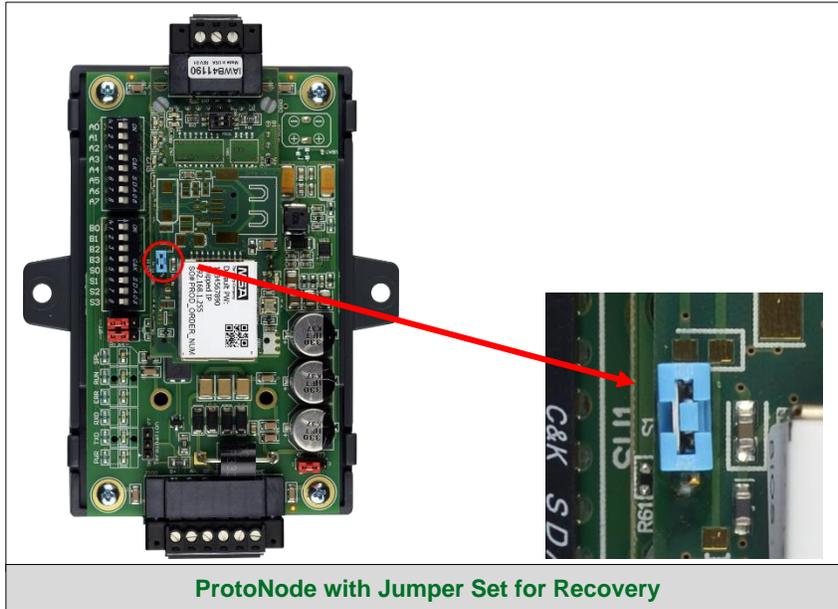

- Wait for 1 to 2 minutes for the Run LED to start flashing.

NOTE: See Run LED location below:

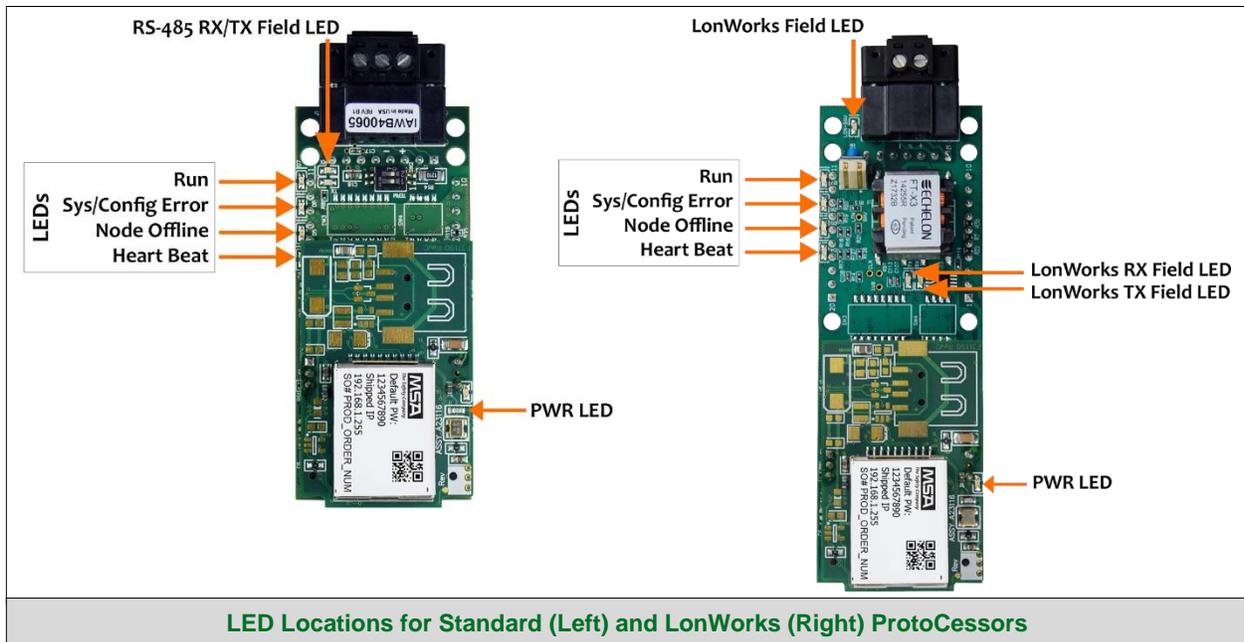

- When the Run LED starts flashing, remove the jumper.
- The unit IP Address reverts to the one determined by the firmware:
 - **For current firmware ProtoNodes, ProtoCarriers and ProtoCessors:** 192.168.1.24
 - **For current firmware QuickServers:** 192.168.2.101
 - **For old firmware (try this if one of the Addresses above don't work):** 192.168.2.100
- Open a browser window on a PC connected to the local network and download the config/firmware/img files for the application.